






## Remote control layout

- 1 TV input source select
- 2 TV/AUX power/standby
- 3 Color navigation
- 4 'A' button
- 5 Set-top box (STB) PVR transport
- 6 Apps
- 7 Navigation and OK
- 8 Back
- 9 Volume up and down
- 10 Channel select and text entry
- 11 Information
- 12 Search
- 13 Infra-red (IR) window
- 14 Microphone
- 15 STB power/standby
- 16 'B' button
- 17 'C' button
- 18 Electronic Program Guide
- 19 Home
- 20 Voice control  
This button may have  or  icon
- 21 Channel/Page up and down
- 22 Mute
- 23 Subtitles/closed captions
- 24 Last channel recall
- 25 Low battery warning LED

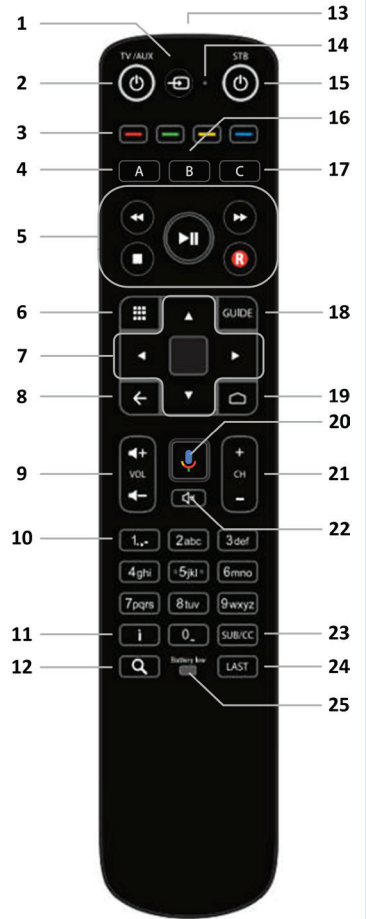

**Note:** Some functionality (e.g. PVR) may not be available on specific models of set-top box (STB), also functionality may vary with the TV service delivered by your service provider.


## 1. Activate batteries

To activate batteries, pull out the plastic tab

## 2. Controlling the STB (pairing the remote control)

The Maxi remote control is designed to control your STB and (optionally) your TV or auxiliary device.

During the initial setup of the STB, you will be guided through the process of pairing the remote control with the STB. The figure below is what you can expect to see on your TV screen.

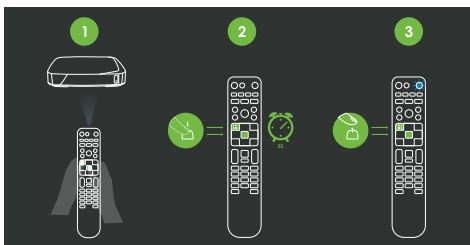


- 1) Point the remote control at the STB. Do not cover the infrared (IR) window on the front of the remote control and at the front of the STB.
- 2) Press and hold the OK and PPS buttons simultaneously for 5 seconds or until the STB button blinks twice.
- 3) Release the buttons.
- 4) The STB button should be illuminated blue.

Once the pairing is successful, you will see a short blink and pairing screen will disappear.

**Note:** The remote is in "pairing mode" when the STB button is illuminated blue. During pairing mode, no remote control keys will work except the BACK key. You must press BACK to stop pairing or to use another function.

## 3. Controlling the TV

The Maxi remote control for Android TV supports a "Simple Remote Wizard" to automatically detect the TV brand connected to your STB via HDMI. The Wizard will guide you through the steps to confirm that the remote control is able to control your TV. The image below is the first screen of the Simple Remote Wizard.

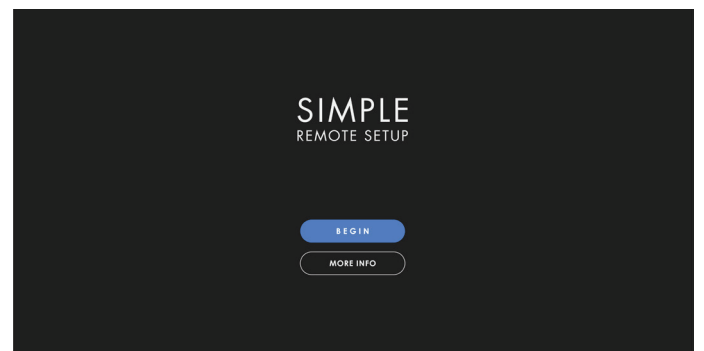

If you receive a new remote control, you can trigger the Simple Remote Wizard by going to: Settings > Device Preferences > Remotes and Accessories. Select your remote control from the list and choose "Simple Setup".

## Battery information

Do not mix different types of battery or old and new batteries.

Do not use rechargeable batteries.

Remove the batteries from the remote control if you are not going to use it for several weeks, to avoid the risk of leakage.

Please respect your environment and any local regulations and dispose of old batteries in a responsible manner.

Do not attempt to recharge the batteries.

Immediately remove any leaking batteries.

Take care when handling leaking batteries as they may cause burns to the skin or eyes, or other physical injuries.

## What if my TV/Aux device cannot be found? (IR Learning)

The Maxi ATV remote control can learn a key function from another 'source' remote control.

1. Choose your 'target key' on the remote control. It must be one of the following keys: TV/AUX POWER / TV INPUT / VOL+ / VOL- / MUTE. This key will learn a function from the source remote control.
2. Press 4 and 6 for at least three seconds. The TV/AUX POWER key will flash twice and remain on.
3. Press your target key within 30 seconds:
  - if valid, the TV/AUX POWER key will give a confirmation flash and remain on.
  - if invalid, or you do not press within 30 seconds, the TV/AUX POWER key will give a long flash and return to user mode.
4. Hold the Maxi ATV remote control 3 - 6 cm from the source remote control with the IR windows facing each other, then press your target key on the source remote control (e.g. if your target key on the Maxi ATV remote control is mute, press mute on the source remote control).
5. If the IR signal is received correctly, the TV/AUX POWER key will turn off and the remote control will return to normal mode (note: this can overwrite a previously learned code).
6. If the IR signal is not received correctly, or is received after 30 seconds, the Maxi ATV remote control will not store the code from the source remote control: it will give a long flash and return to user mode.
7. If the Back key is pressed on the remote control while it is waiting for an IR signal, the TV/AUX POWER key will give a long flash and return to user mode. (If the target key is pressed, any learned code on it is cleared.)
8. To clear the target key, press 4 and 6 for at least three seconds. The TV/AUX POWER key will flash twice and remain on. Then press your <target key> twice. The TV/AUX POWER key will flash to confirm the target key is cleared.

## How do I return my remote to Factory Settings?

1. Press 1 and 6 for at least three seconds until the TV/AUX POWER key flashes twice then stays on.
2. Enter the key sequence 9 8 1. After completing the sequence the STB key will flash twice. The TV settings are now deleted from the remote control and it returns to factory settings: Bluetooth mode, and unpaired.